


1. DESTINATION SEARCH

1 Press the “DEST” button.



2 This screen is displayed.

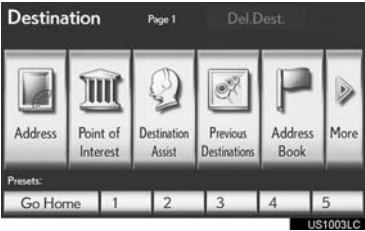

- One of 11 different methods can be used to search a destination. (See pages 63 through 79.)


INFORMATION

- When searching a destination, the response to the screen button may be slow.

SELECTING THE SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using “Address”, “Point of Interest” or “Intersection & Freeway”.

1 Touch “Change State/Province” to display a list of the states/provinces/territories of the United States and Canada.

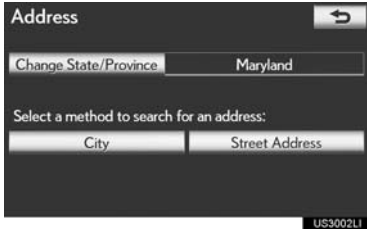

- For map database information and updates, see “MAP DATABASE VERSION AND COVERAGE AREA” on page 312.
- If a state (province) has not been selected yet, “Select State/Province” is displayed.

2 Touch the desired state (province).



- The previous screen will be displayed.

DESTINATION SEARCH BY HOME

- 1 Press the “DEST” button.
- 2 Touch “Go Home”.



- Your home address is set as the destination. The navigation system performs a search for the route.
- 3 Touch “OK”.


- To use this function, it is necessary to set a home address. (To register home, see page 103.)

INFORMATION

- If a home address has not been registered, a message confirming if it is desirable to set a home will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the set home address if “OK” is touched even while driving.

DESTINATION SEARCH BY PRESET DESTINATIONS

- 1 Press the “DEST” button.
- 2 Touch any of the preset destination buttons (1-5).

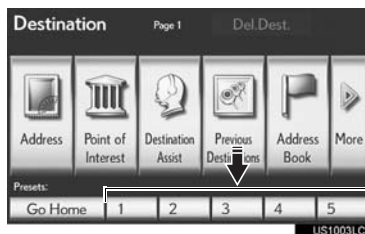

- The selected preset destination point is set as the destination. The navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 81.)
- 3 Touch “OK”.

- To use this function, it is necessary to set preset destinations to the preset screen buttons (1-5). (See “REGISTERING PRESET DESTINATIONS” on page 105.)

INFORMATION


- If a preset destination point has not been registered, a message confirming if it is desirable to set a preset destination will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the preset destination point if “OK” is touched even while driving.

DESTINATION SEARCH BY
“Address”

There are 2 methods to search a destination by address:

- (a) Search by city
- (b) Search by street address

- 1 Press the “DEST” button.
- 2 Touch “Address” on the “Destination” screen.
- 3 Touch the desired search method.

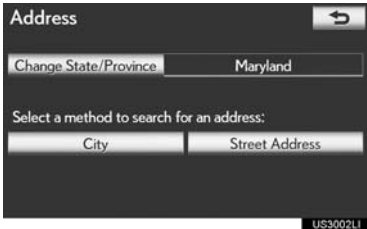

SELECTING A CITY TO
SEARCH

- 1 Press the “DEST” button.
- 2 Touch “Address” on the “Destination” screen.
- 3 Touch “City”.



- 4 Input a city name.



- 5 Touch the screen button of the desired city name from the displayed list.



- 6 Input the street name and touch “OK”.



- 7 When the desired street name is found, touch the corresponding screen button.



- When the desired street name is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 81.)

- 8 Input a house number.



- If the same address exists in more than 1 city, the current screen changes to the address list screen.

■ SEARCHING FROM THE LAST 5 CITIES

- 1 Touch “Last 5 Cities”.



- 2 Touch the screen button of the desired city name from the displayed list.




- The current screen changes to the screen for inputting a street name. (See “SELECTING A CITY TO SEARCH” on page 64.)

INFORMATION


- If the navigation system has never been used, this function will not be available.

SEARCH BY STREET ADDRESS

- 1 Press the “DEST” button.
- 2 Touch “Address” on the “Destination” screen.
- 3 Touch “Street Address”.

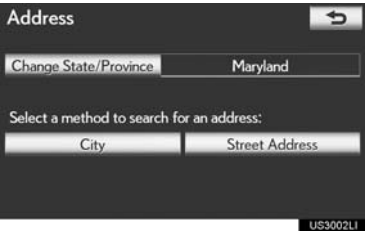

- 4 Touch numbers directly on the screen to input the house number.

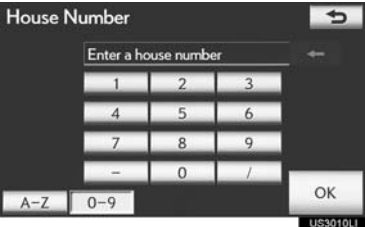


- After inputting the house number, touch “OK” to display the screen for inputting the street name.

- 5 Input the street name and touch “OK”.



- 6 When the desired street name is found, touch the corresponding screen button.

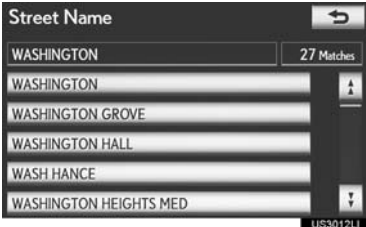


- When the desired street name is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 81.)
- If the same address exists in more than 1 city, a screen requesting the city name to be input or selected will be displayed.

- 7 Input a city name.



- 8 Touch the screen button of the desired city name from the displayed list.

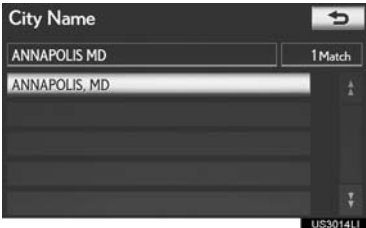

INFORMATION


- A street name can be searched using only the body part of its name.
- For example: S WESTERN AVE
 - A search can be performed by inputting "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

**DESTINATION SEARCH BY
"Point of Interest"**

There are 4 methods to search a destination by Points of Interest:

- Search by name
- Search by category
- Search by phone #
- Search by eDestination


- Press the "DEST" button.
- Touch "Point of Interest" on the "Destination" screen.
- Touch the desired search method.

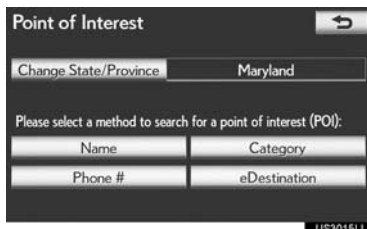**SEARCH BY "Name"**

- Press the "DEST" button.
- Touch "Point of Interest" on the "Destination" screen.
- Touch "Name" on the "Point of Interest" screen.
- Input the name of the POI.




- Touch the screen button of the desired destination.

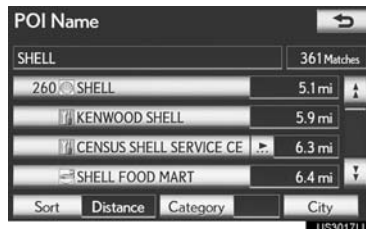

- When the desired destination is selected, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 81.)
- When inputting the name of a specific POI, and there are 2 or more sites with the same name, the list screen is displayed.

- 6 Touch the screen button of the desired destination.

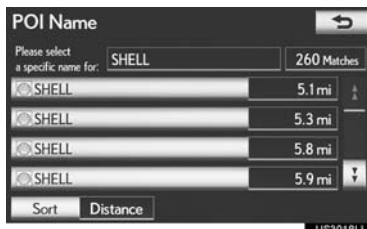

- If the same name exists in more than 1 city, a search can be performed more easily using “City” or “Category”. (See “SELECTING A CITY TO SEARCH” on page 64 and “SELECTING FROM THE CATEGORIES” on page 69.)


- The desired POI can be displayed on the map screen. (See “DISPLAY POI ICONS” on page 98.)

INFORMATION

- To search for a facility name using multiple search words, put a space between each word.

■ SELECTING A CITY TO SEARCH

- 1 Touch “City”.

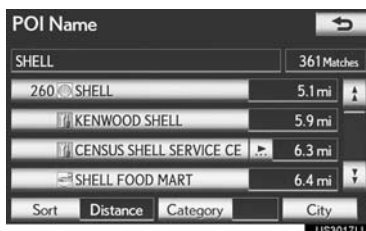


- 2 Input the city name.




- To cancel the city setting, touch “Any City”.

- 3 Touch the screen button of the desired city name from the displayed list.

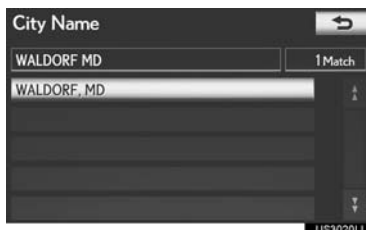


■ SELECTING FROM THE CATEGORIES

1 Touch “Category”.

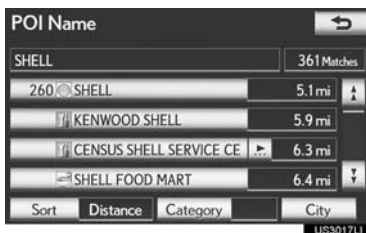

2 Touch the screen button of the desired category.

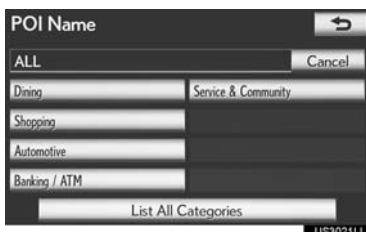

- If the desired POI category is on the screen, touch its screen button to display a detailed list of the POI category.
- If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.




- When the desired category is touched, the POI name list screen is displayed.


SEARCH BY “Category”

The destination can be set by touching the search point and the POI category.

- 1 Press the “DEST” button.
- 2 Touch “Point of Interest” on the “Destination” screen.
- 3 Touch “Category”.

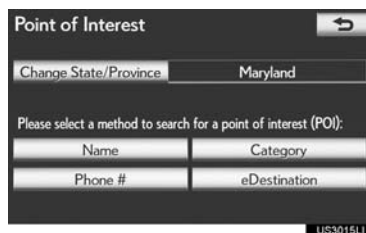

- 4 This screen is displayed.

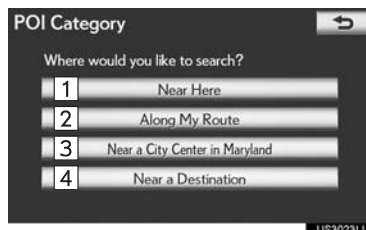

- On this screen, the following operations can be performed:

No.	Function
1	Touch to set the search point from near the current position.
2	Touch to set the search point from along the selected route.
3	Touch to set the search point from near a city center.
4	Touch to set the search point from near a destination.

INFORMATION


- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

SETTING THE SEARCH POINT FROM NEAR HERE**1 Touch “Near Here”.**

- The search point is set at the current position, and the “POI Category” screen will be displayed. (See page 72.)

SETTING THE SEARCH POINT FROM ALONG MY ROUTE**1 Touch “Along My Route”.**

- The search point is set and the “POI Category” screen will be displayed. (See page 72.)

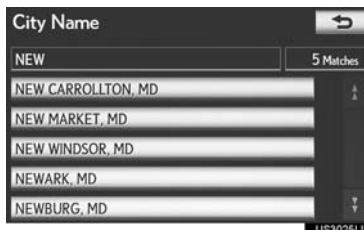SETTING THE SEARCH POINT FROM NEAR CITY CENTER**1 Touch “Near a City Center in XX”.****2 Input the city center name.****3 Touch the screen button of the desired city center name.**

- The search point is set and the “POI Category” screen will be displayed. (See page 72.)

*: XX represents the touched search area name.

■ SELECTING FROM THE LAST 5 CITIES

- 1 Touch “Near a City Center in XX*”.
- 2 Touch “Last 5 Cities”.



- 3 Touch the screen button of the desired city center name.




- The search point is set and the “POI Category” screen will be displayed. (See page 72.)

*: XX represents the selected search area name.

■ SETTING THE SEARCH POINT FROM NEAR A DESTINATION

- 1 Touch “Near a Destination”.
- 2 Touch the screen button of the desired destination.

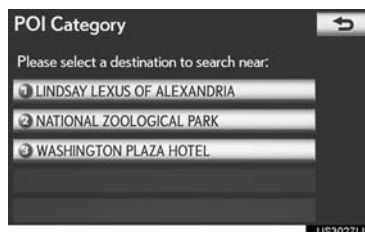


- The search point is set and the “POI Category” screen will be displayed. (See page 72.)

■ TO SEARCH FOR POIs NEAR THE SEARCH POINT


When the search point is set, the “POI Category” screen will be displayed.

- 1 Touch the desired POI category.

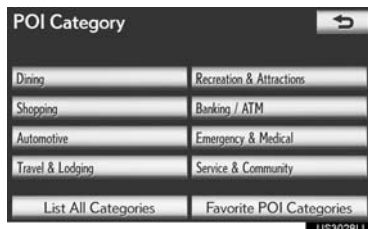

- If the desired POI category is not on the screen, touch “**List All Categories**” to list all POI categories.
- If “**Favorite POI Categories**” is touched, a search can be performed using the 6 POIs that have been previously set. For more details, see “POI CATEGORY CHANGE (SELECT POI ICONS)” on page 122.

- 2 Touch the desired POI category from the list.

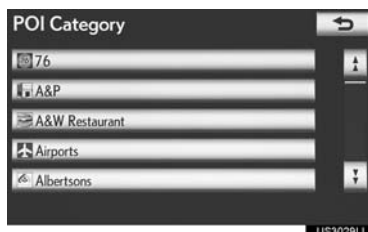


- 3 Touch the screen button of the desired item.




- When the desired item is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 81.)

SEARCH BY "Phone #"

- 1 Press the "DEST" button.
- 2 Touch "Point of Interest" on the "Destination" screen.
- 3 Touch "Phone #" on the "Point of Interest" screen.
- 4 Input a phone number.

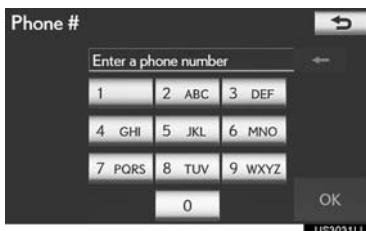

- 5 After inputting a phone number, touch "OK".
- When a phone number is input, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 81.)
 - If there is more than 1 site with the same number, the following screen will be displayed.

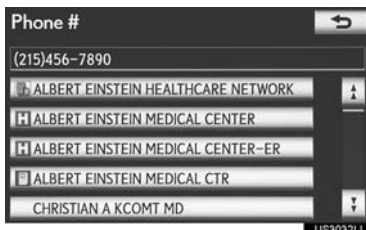

- To set an address book entry as a destination using the phone number, the number must already be registered with the address book entry. (See page 107.)

INFORMATION

- If there is no match for the phone number input, a list of identical numbers with different area codes will be displayed.


SEARCH BY "eDestination"

- 1 Press the "DEST" button.
 - 2 Touch "Point of Interest" on the "Destination" screen.
 - 3 Touch "eDestination" on the "Point of Interest" screen.
- With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. Up to 200 locations can be stored online and accessed or updated at any time. Locations can be organized into up to 20 folders. (See "eDestination" on page 355.)




DESTINATION SEARCH BY “Destination Assist”

- 1 Press the “DEST” button.
 - 2 Touch “Destination Assist” on the “Destination” screen.
- Destination Assist provides you with live assistance for finding destinations via the Lexus Enform with Safety Connect response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI). After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle’s navigation system. (See “Destination Assist” on page 353.)

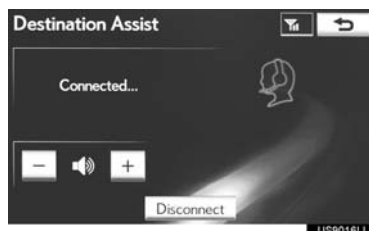

DESTINATION SEARCH BY “Previous Destinations”

- 1 Press the “DEST” button.
- 2 Touch “Previous Destinations” on the “Destination” screen.
- 3 Touch the screen button of the desired destination.

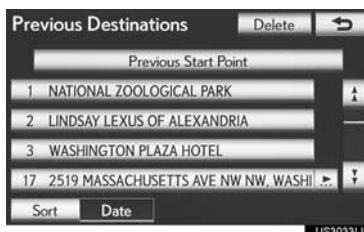

- The previous starting point and up to 100 previously set destinations are displayed on the screen.


“Delete”: Touch to delete the previous destination. (To delete previous destinations, see page 80.)

- When the desired destination is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 81.)

- The list of previous destinations can also be deleted by touching “Delete Previous Dest.” on the “Navigation Settings” screen when the vehicle is stopped. (See “DELETING PREVIOUS DESTINATIONS” on page 116.)

DESTINATION SEARCH BY "Address Book"

- 1 Press the "DEST" button.
- 2 Touch "Address Book" on the "Destination" screen.
- 3 Touch the screen button of the desired address book entry.

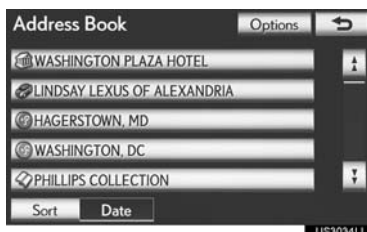

- A list of registered address book entries is displayed.

"Options": Touch to register or edit address book entries. (See page 108.)

- When the desired address book entry is selected, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 81.)

DESTINATION SEARCH BY "Emergency"

- 1 Press the "DEST" button.
- 2 Touch "Emergency" on the second page of the "Destination" screen.
- The display changes to a screen to select police stations, dealers, hospitals or fire stations.
- 3 Touch the desired emergency category.




- The selected emergency category is displayed.

3

NAVIGATION SYSTEM

- 4 Touch the screen button of the desired destination.

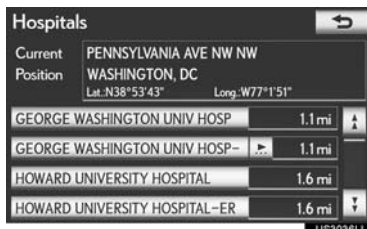

- When the desired destination is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 81.)

INFORMATION


- The navigation system does not guide in areas where route guidance is unavailable. (See page 134.)
- The emergency function can be used even while driving.
- While driving, only the currently displayed items and the items on the next page can be viewed.

DESTINATION SEARCH BY “Intersection & Freeway”

There are 2 methods to search a destination by Intersection & Freeway:

- (a) Search by intersection
- (b) Search by freeway

- 1 Press the “DEST” button.
- 2 Touch “Intersection & Freeway” on the second page of the “Destination” screen.
- 3 Touch the desired method.

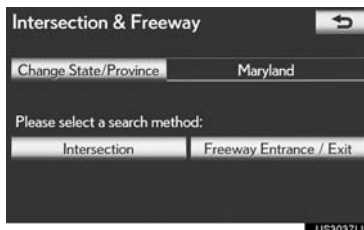

SEARCH BY "Intersection"

- 1 Press the "DEST" button.
- 2 Touch "Intersection & Freeway" on the second page of the "Destination" screen.
- 3 Touch "Intersection" on the "Intersection & Freeway" screen.
- 4 Input the name of the first intersecting street which is located near the destination to be set, and touch "OK".




- 5 Touch the screen button of the desired item.



- 6 Input the name of the second intersecting street.




- 7 Touch the screen button of the desired item.

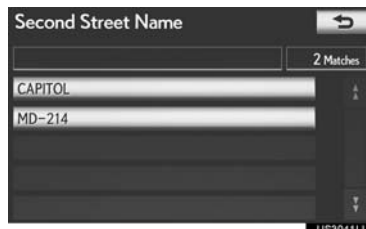

- When the desired item is selected, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 81.)

INFORMATION

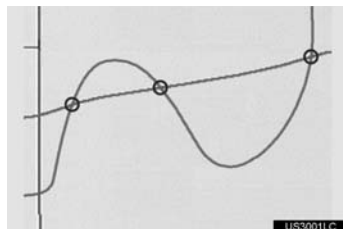


- If the same 2 streets cross at more than 1 intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See "STARTING ROUTE GUIDANCE" on page 81.)

SEARCH BY "Freeway Entrance / Exit"


- 1 Press the "DEST" button.
- 2 Touch "Intersection & Freeway" on the second page of the "Destination" screen.
- 3 Touch "Freeway Entrance / Exit" on the "Intersection & Freeway" screen.
- 4 Input a freeway name.



- 5 Touch the screen button of the desired freeway.

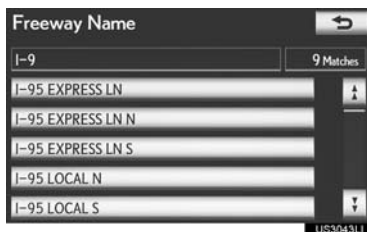

- 6 Touch "Entrance" or "Exit".

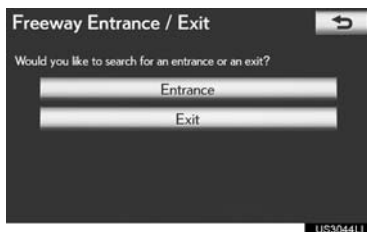

- 7 Input a freeway entrance or exit name, and touch "OK".



- 8 Touch the screen button of the desired entrance or exit name.




- When the desired entrance or exit is selected, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 81.)

INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).

DESTINATION SEARCH BY "Map"

- 1 Press the **"DEST"** button.
- 2 Touch **"Map"** on the second page of the "Destination" screen.
- 3 Scroll the map to the desired point.

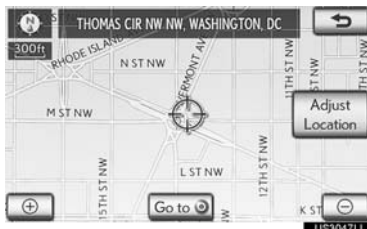


- 4 Touch **"Go to"**.
 - The navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 81.)

INFORMATION

- Guidance starts if **"OK"** is touched even while driving. However, the cursor cannot be moved.

DESTINATION SEARCH BY "Coordinates"

- 1 Press the **"DEST"** button.
- 2 Touch **"Coordinates"** on the second page of the "Destination" screen.
- 3 Input the latitude and the longitude.

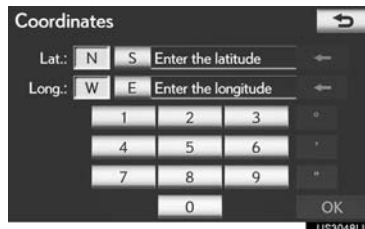


- 4 After inputting the latitude and longitude, touch **"OK"**.
 - When the desired screen button is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 81.)

DELETING SET DESTINATIONS

A set destination can be deleted.

- 1 Press the **"DEST"** button.
- 2 Touch **"Del.Dest."** on the "Destination" screen.
- When more than 1 destination is set, a list will be displayed on the screen.
- 3 Touch the destination to be deleted.

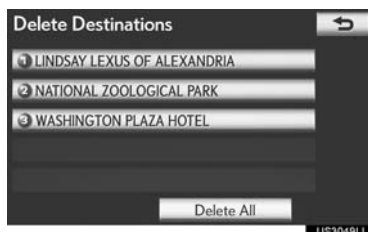

"Delete All": Touch to delete all destinations on the list.

- 4 Touch **"Yes"** to delete the destination(s).



- A message appears to confirm the request to delete.
 - If **"Yes"** is touched, the data cannot be recovered. If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.
 - If **"No"** is touched, the previous screen will be displayed.
- Set destinations can also be deleted by touching **"Route"**. (See **"DELETING DESTINATIONS"** on page 92.)

2. STARTING ROUTE GUIDANCE

When **“Map”** is touched on the **“Confirm Destination”** screen, the map screen will be displayed. The map location of the selected destination can be set as a destination.

1 Scroll the map to the desired point.



“Adjust Location”: Touch to adjust the position in smaller increments.



- When an arrow facing the desired point is touched, the map scrolls in that direction.
- When the screen button is released, the scrolling stops.

2 Touch **“Go to”**.

- The system starts route search and displays recommended routes.

- If a destination has already been set, **“Go to”** and **“Add to Route”** will be displayed.

“Go to”: Touch to delete the existing destination(s) and set a new one.

“Add to Route”: Touch to add a destination.

“Info”: If this screen button is displayed on the top of the screen, touch it to view items such as name, address, position and phone number.

3 To start guidance, touch **“OK”**.



No.	Function
1	Current position
2	Destination point
3	Type of route and its distance
4	Distance of the entire route
5	Touch to display a list of the turns required to reach the destination.
6	Touch to change the route. (See page 83.)
7	Touch the desired route from 3 possible routes. (See page 82.)

- Guidance can be paused or resumed. (See “PAUSING AND RESUMING GUIDANCE” on page 97.)
- If “OK” is touched until a beep sounds, demo mode will start. Press the “MAP/VOICE” button to end demo mode.

CAUTION

- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

INFORMATION


- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the point selected is set as the destination.

3 ROUTES SELECTION

1 Touch “3 Routes”.



2 Touch “Preferred”, “Alternate” or “Short”.

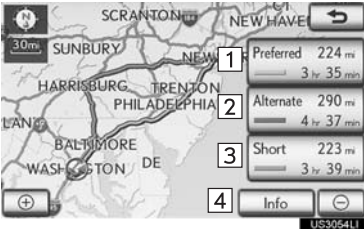

No.	Function
1	Touch to display the recommended route.
2	Touch to display the alternative route.
3	Touch to display the route that is the shortest distance to the set destination.
4	Touch to display the information shown below about each of the 3 routes.

	Preferred	Alternate	Short
1	3 hr 35 min	4 hr 37 min	3 hr 39 min
2	224 mi	290 mi	223 mi
3	112 mi	7.2 mi	107 mi
4	218 mi	284 mi	212 mi
5			

2 This screen is displayed.

Destination	
1 Add	2 Delete
3 Reorder	
4 Preferences	

No.	Function
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Toll road
4	Freeway
5	Ferry

No.	Function	Page
1	Touch to add destinations.	91
2	Touch to delete destinations.	92
3	Touch to reorder destinations.	91
4	Touch to display the choices available when setting the conditions the system uses to determine the route to the destination.	95

EDIT ROUTE

Conditions for the route to the destination can be set again.

1 Touch "Edit Route".

Route	Time	Distance
1	3:35	224 mi
2		218 mi
3		112 mi
Total		224 mi

INFORMATION

- Even if the "Freeways" indicator is dimmed, the route cannot avoid including a freeway in some cases. (See page 95.)
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.